



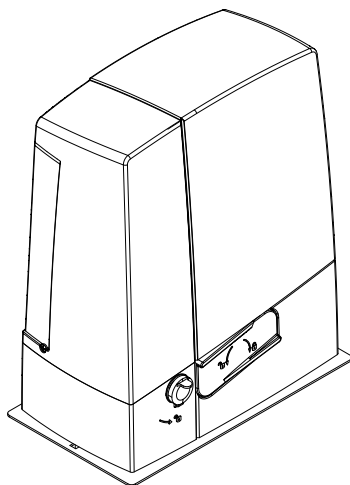


Sliding gate operator BXV series

FA01004-EN

**BXV04AGM****BXV04AGS / BXV06AGS / BXV08AGS / BXV10AGS****BXV04RGS / BXV06RGS / BXV08RGS / BXV10RGS****INSTALLATION MANUAL**

EN English

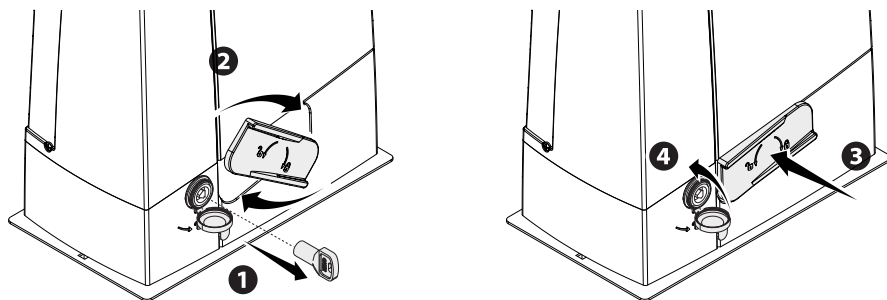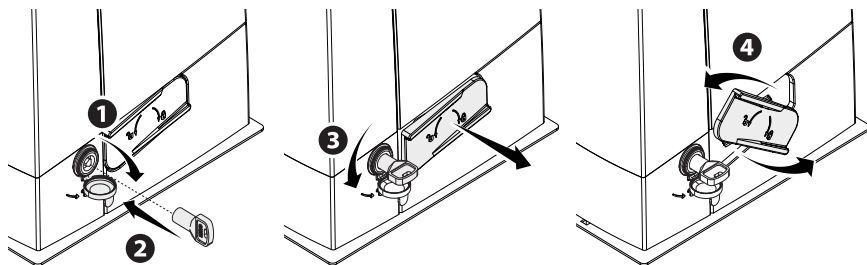


WARNING! Important safety instructions.

***Follow all of these instructions. Improper installation can cause serious bodily harm.
Before continuing, also read the general precautions for users.***




This product must only be used for its specifically intended purpose. Any other use is dangerous. Came S.p.A. is not liable for any damage caused by improper, wrongful and unreasonable use. • This manual's product is defined by machinery directive 2006/42/CE as "partly-completed machinery". Partly-completed machinery is a set that almost constitutes a machine, but which, alone, cannot ensure a clearly defined application. Partly-completed machinery is only destined to be incorporated or assembled to other machinery or other partly-completed machinery or apparatuses to build machinery that is regulated by Directive 2006/42/CE. The final installation must be compliant with European directive 2006/42/CE and current European reference standards. Given these considerations, all procedures stated in this manual must be exclusively performed by expert, qualified staff • The manufacturer declines any liability for using non-original products; which would result in warranty loss • Keep this manual inside the technical folder along with the manuals of all the other devices used for your automation system • Check that the operator's specified temperature range suits the locations where it will be installed • Laying the cables, installation and testing must follow state-of-the-art procedures as dictated by regulations • If the power-supply cable is damaged, replace it immediately through the manufacturer or an authorized technical assistance center, or qualified staff, to prevent any risk • Make sure the mains power supply is disconnected during all installation procedures • The operator cannot be used with gates fitted with pedestrian gates, unless its operation can be activated only when the pedestrian gate is in safety position • Make sure that people are not entrapped between the gate's moving and fixed parts due to the gate's movement • Before installing the operator, check that the gate is in proper mechanical condition, that it is properly balanced and that it properly closes: if any of these conditions are not met, do not continue before having met all safety requirements • Make sure the gate is stable and the carriage function properly and are well-greased, and that it opens and closes smoothly • The guide rail must be well-fastened to the ground, entirely above the surface and free of any impediments to the gate's movement. • The rails of the upper guide must not cause any friction • Make sure that opening and closing limiters are fitted • Make sure the operator is installed onto a sturdy surface that is protected from any collisions • Make sure that mechanical stops are already installed. • If the operator is installed lower than 2.5 from the ground or from any other access level, fit protections and signs to prevent hazardous situations • Do not fit the operator upside down or onto elements that could yield under its weight. If necessary, add reinforcements to the fastening points • Do not install onto tilted gate leaves • Check that no lawn watering devices spray the operator with water from the bottom up • Any residual risks must be indicated clearly with proper signage affixed in visible areas. All of which must be explained to end users. • Suitably section off and demarcate the entire installation site to prevent unauthorized persons from entering the area, especially minors and children • Affix cautionary signs, such as, the gate plate, wherever needed and in plain sight. • Use proper protections to prevent mechanical hazards when people are loitering around the machinery's range of action, for example, to prevent finger crushing between the rack and pinion • The electrical cables must run through the cable glands and must not touch any heated parts, such as the motor, transformer, and so on) • Make sure you have set up a suitable dual pole cut off device along the power supply that is compliant with the installation rules. It should completely cut off the power supply according to category III surcharge conditions • All opening controls must be installed at least 1.85 m from the perimeter of the gate's working area, or where they cannot be reached from outside the gate •

All switches in maintained-action mode must be positioned so that the moving gates leaves, the transit areas and vehicle thru-ways are completely visible, and yet the switches must be also away from any moving parts. • Unless the action is key operated, the control devices must be fitted at, at least, 1.5 m from the ground and unreachable by any unauthorized persons. • To pass the collision force test use a suitable sensitive safety-edge. Install it properly and adjust as needed. • Before handing over to users, check that the system is compliant with the 2006/42/CE uniformed Machinery Directive. Make sure the settings on the operator are all suitable and that any safety and protection devices, and also the manual release, work properly. • Affix a permanent tag, that describes how to use the manual release mechanism, close to the mechanism. • Make sure to hand over to the end user, all operating manuals for the products that make up the final machinery.

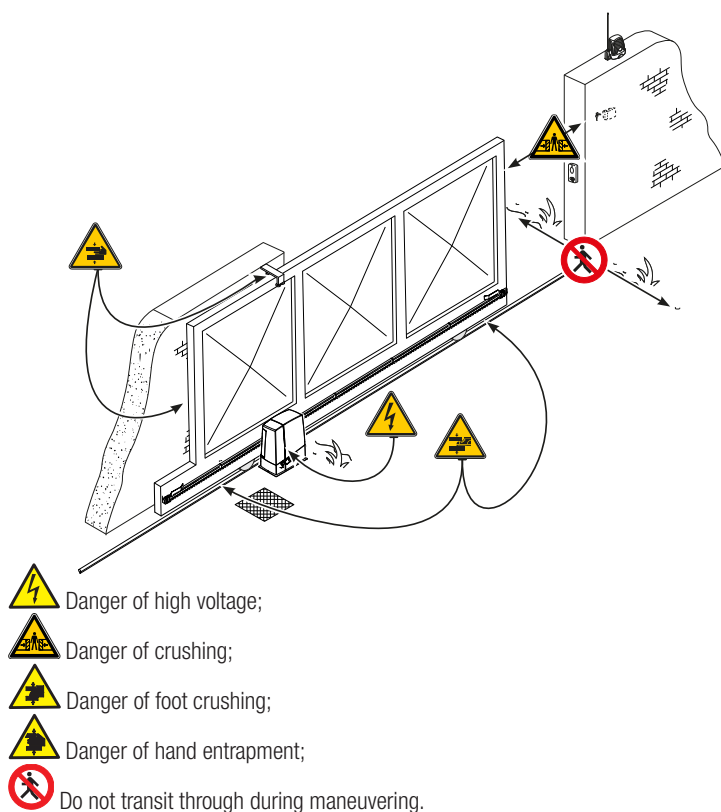- The next figure shows the main hazard points for people -



KEY

-  This symbol shows which parts to read carefully.
-  This symbol shows which parts describe safety issues
-  This symbol shows which parts to tell users about.


The measurements, unless otherwise stated, are in millimeters.

DESCRIPTION

Operator complete with control board, movement control and obstruction detection device and mechanical limit switches for sliding gates weighing up 1,000 Kg and measuring 20 m in length.

INTENDED USE

The operator is designed to power sliding gates in residential and apartment block settings.

-  Do not install or use this device in any way, except as specified in this manual.


LIMITS TO USE

| Type | BXV04AGM BXV04AGS BXV04RGS | BXV06AGS BXV06RGS | BXV08AGS BXV08RGS | BXV10AGS BXV10RGS |
|-------------------------------|----------------------------------|----------------------|----------------------|----------------------|
| Maximum gate-leaf length (m) | 14 | 18 | 20 | 20 |
| Maximum gate-leaf weight (kg) | 400 | 600 | 800 | 1000 |
| Pinion module | 4 | 4 | 4 | 4 |

TECHNICAL DATA


| Type | BXV04AGM BXV04AGS BXV04RGS | BXV06AGS BXV06RGS | BXV08AGS BXV08RGS | BXV10AGS BXV10RGS |
|---|----------------------------------|----------------------|----------------------|----------------------|
| Protection rating (IP) | 44 | | | |
| Power supply (V - 50/60 Hz) | 110 / 230 AC | | | |
| Input voltage motor (V) | 24 DC | | | |
| Stand-by consumption (W) | 5.5 | | | |
| Stand-by consumption with the RGP1 (W) module | 0.5 | | | |
| Maximum power (W) | 170 | 270 | 400 | |
| Duty cycle | HEAVY-DUTY SERVICE | | | |
| Operating temperature (°C) | -20 to +55 | | | |
| Thrust (N) | 350 | 600 | 800 | 1000 |
| Maneuvering speed (m/min) | 12 | | 11 | |
| Weight (Kg) | 10 | 10.5 | 11.5 | 11.7 |

DIMENSIONS

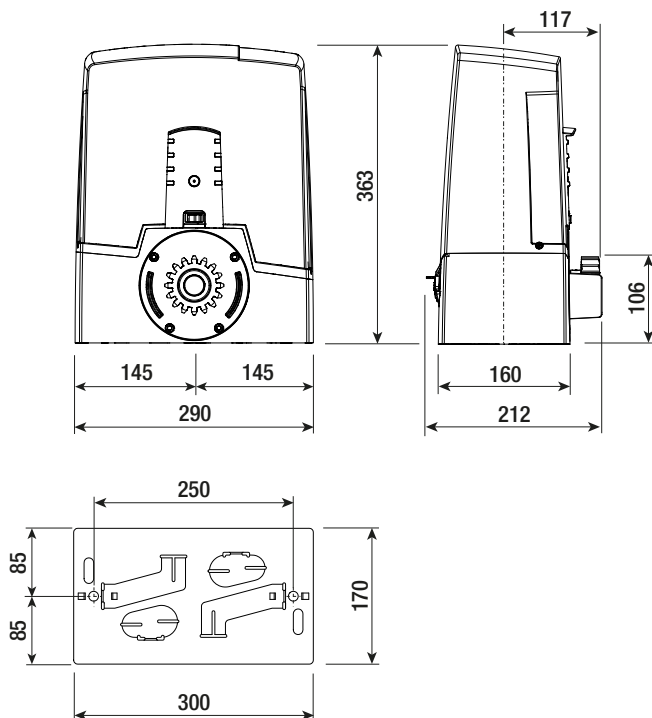


STANDARD INSTALLATION

1. Operator
2. Limit-switch fins
3. Rack
4. Selector
5. Flashing light
6. Photocells
7. Photocell post
8. Mechanical gate stop
9. Transmitter
10. Slide guides
11. Junction pit
12. Sensitive safety-edge

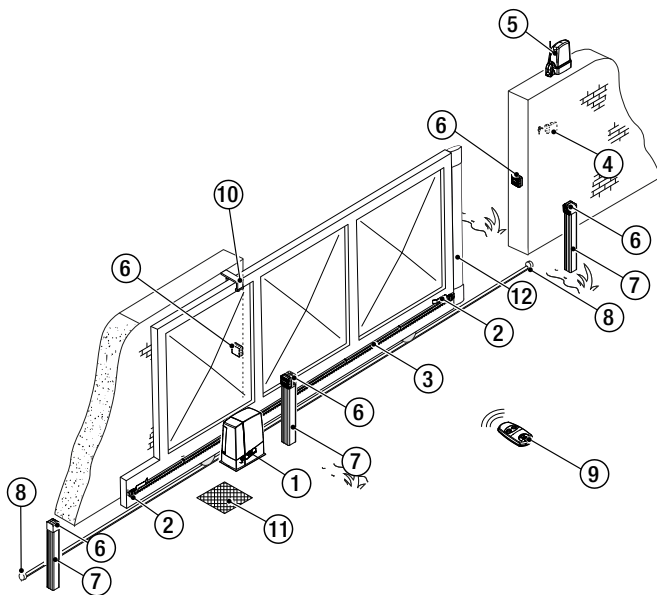

DESCRIPTION OF PARTS

1. Cover
2. Board-fitting support
3. Gear motor
4. Anchoring plate
5. Housing for two emergency batteries
6. Transformer
7. Mechanical limit switch
8. Release cable threading hole
9. Housing for the RGP1 module
10. Housing for thermostat with heating rod
11. Protection card lid
12. Control board
13. Control-board holder
14. Housing for the RLB battery charger
15. Housing for UR042 module
16. Housing for SMA and RGSM001 sensors
17. Release lever
18. Lock
19. Limit-switch fins
20. Magnetic sensor (BXV04AGM only)
21. Magnetic limit-switch tabs (BXV04AGM only)

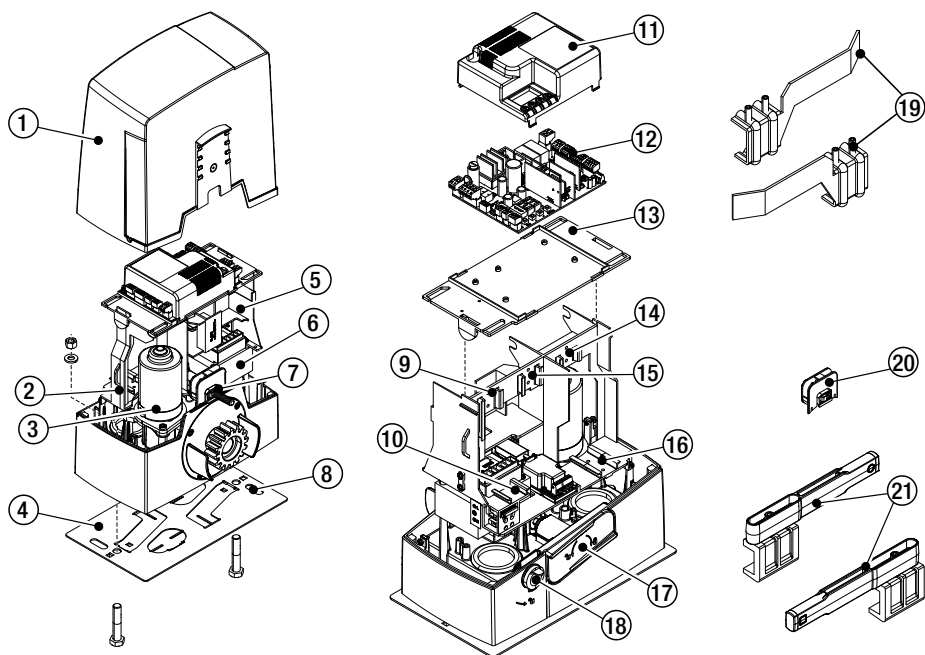

GENERAL INSTALLATION INDICATIONS

△ Only skilled, qualified staff must install this product.

PRELIMINARY CHECKS

△ Before beginning the installation, do the following:

- check that the upper slide-guides are friction-free;
- make sure there is opening and closing mechanical gate stops;
- make sure that the point where the gear motor is fastened is protected from any impacts and that the surface is solid enough;
- set up suitable tubes and conduits for the electric cables to pass through, making sure they are protected from any mechanical damage.

CABLE TYPES AND MINIMUM SECTIONS

| Connection | cable length | |
|--|---------------------------------|--------------------------|
| | < 20 m | 20 < 30 m |
| Input voltage for 230 V AC control board (1P+N+PE) | 3G x 1.5 mm ² | 3G x 2.5 mm ² |
| Signaling devices | 2 x 0.5 mm ² | |
| Command and control devices | 2 x 0.5 mm ² | |
| Safety devices (photocells) | (TX = 2 x 0.5 mm ²) | |
| | (RX = 2 x 0.5 mm ²) | |

📖 When operating at 230 V and outdoors, use H05RN-F-type cables that are 60245 IEC 57 (IEC) compliant; whereas indoors, use H05VV-F-type cables that are 60227 IEC 53 (IEC) compliant. For power supplies up to 48 V, you can use FROR 20-22 II-type cables that comply with EN 50267-2-1 (CEI).

📖 To connect the antenna, use the RG58 (we suggest up to 5 m).

📖 For paired connection and CRP, use a UTP CAT5-type cable (up to 1,000 m long).

📖 If cable lengths differ from those specified in the table, establish the cable sections depending on the actual power draw of the connected devices and according to the provisions of regulation CEI EN 60204-1.

📖 For multiple, sequential loads along the same line, the dimensions on the table need to be recalculated according to the actual power draw and distances. For connecting products that are not contemplated in this manual, see the literature accompanying said products

INSTALLING

△The following illustrations are mere examples. Consider that the space available where to fit the barrier and accessories will vary depending on the area where it is installed. It is up to the installer to find the most suitable solution.

CORRUGATED TUBE LAYING


Dig a hole for the foundation frame.

Set up the corrugated tubes needed for the wiring coming out of the junction pit.

For connecting the gearmotor we suggest using a \varnothing 40 mm corrugated tube, whereas for the accessories we suggest \varnothing 25 mm tubes.

Set up a \varnothing 20 mm tube for running through the external release cable **A**.

📖 The number of tubes depends on the type of system and the accessories you are going to fit.

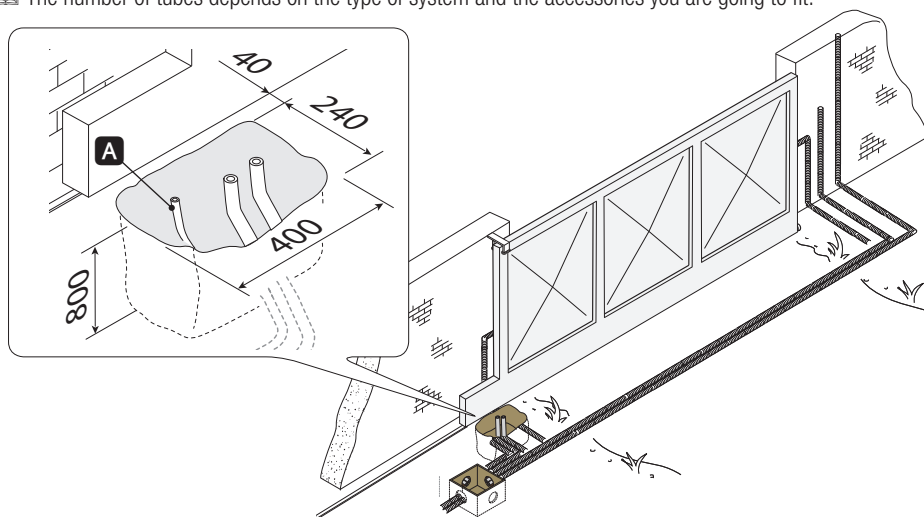


LAYING THE ANCHORING PLATE

Set up a foundation frame that is larger than the anchoring plate and sink it into the dug hole. The foundation frame must jut out by 50 mm above ground level.



Fit an iron cage into the foundation frame to reinforce the concrete.

Fit the bolts into the anchoring plate and lock them using the washers and nuts. Remove the pre-shaped clamps using a screw driver or pliers.

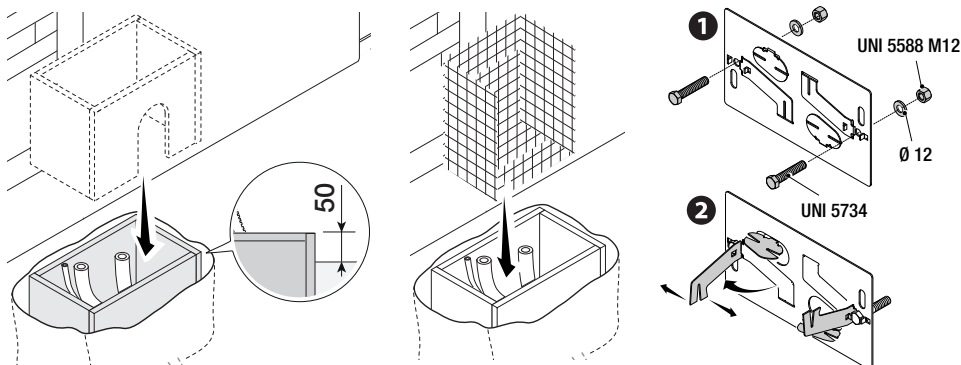

If the rack is already there, place the anchoring plate, being careful to respect the measurements shown in the drawing.




Careful! The tubes must pass through their corresponding holes.

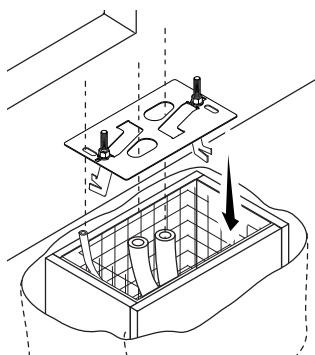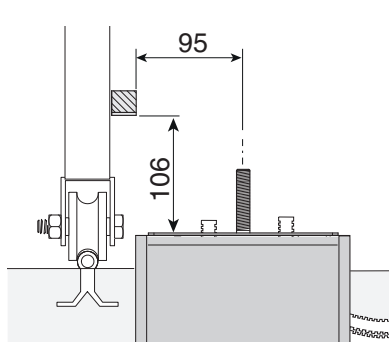

Fill the foundation frame with concrete. The plate must be perfectly level with the bolts which are entirely above surface.



Wait at least 24 hrs for the concrete to solidify.

Remove the foundation frame and fill the hole with earth around the concrete block.

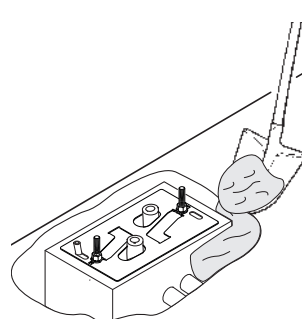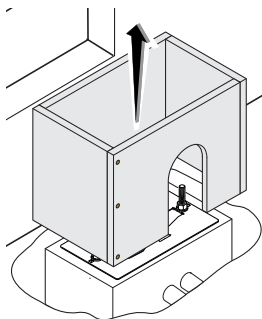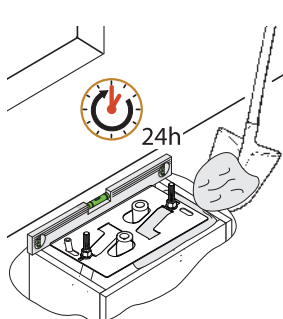



Remove the nut and washer from the bolts

Fit the electric cables into the tubes so that they come out about 600 mm.

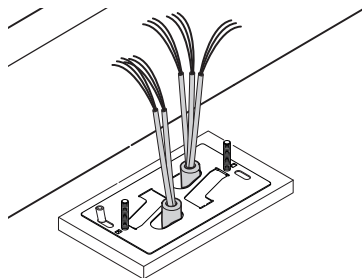
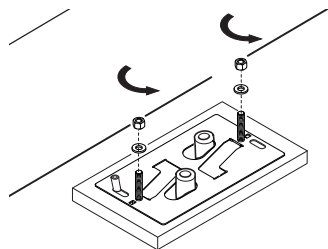


SETTING UP THE GEARMOTOR


Remove the gearmotor cover by loosening the side screws.
Place the gearmotor above the anchoring plate.
Careful! The electric cables must pass under the gearmotor case.

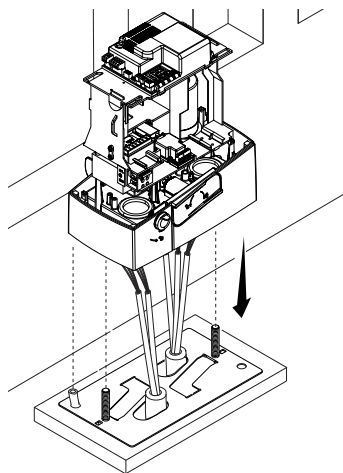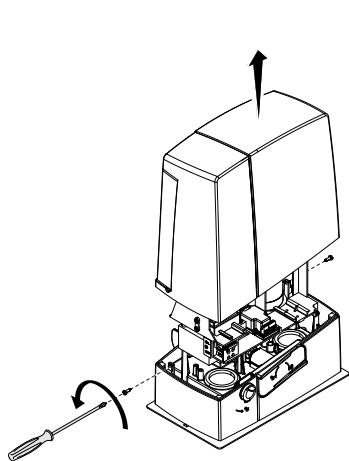

Perforate the cable gland, pass the cables through and fit it into its corresponding housing.
Raise the gearmotor by 5 to 10 mm from the plate by turning the threaded feet, to make room for further pinion and rack adjustments.

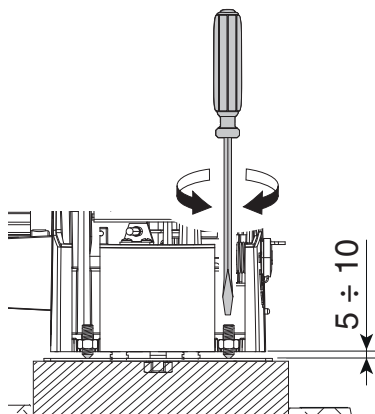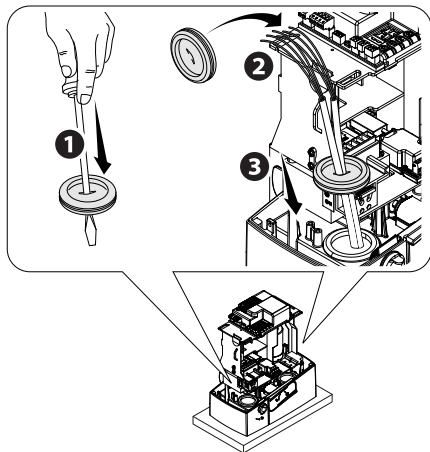


FASTENING THE RACK

 If the rack is already set up, the next step should be to adjust the rack-and-pinion coupling distance, otherwise, fasten it:


- release the gearmotor (see **RELEASING THE GEARMOTOR** paragraph);
- rest the rack above the gearmotor pinion;
- weld or fasten the rack to the gate along its entire length.

To assemble the rack modules, use an extra piece and rest it under the joint, then fasten it using two clamps.

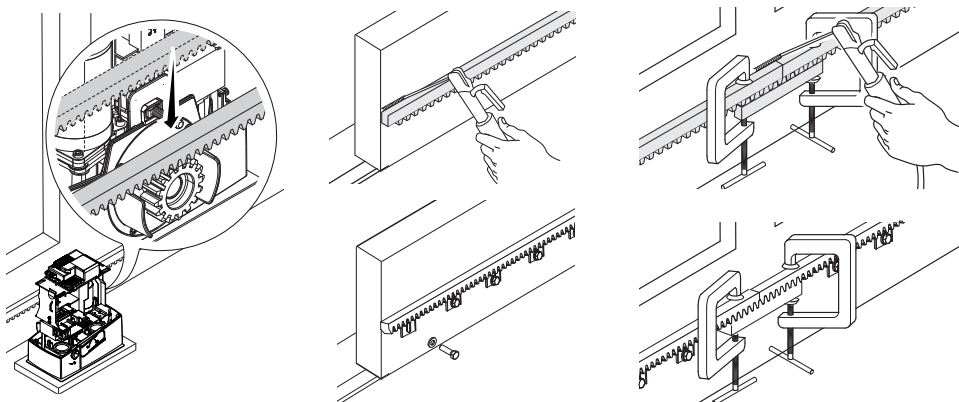


ADJUSTING THE PINION-RACK COUPLING

Manually open and close the gate and adjust the pinion-rack coupling distance using the threaded feet (vertical adjustment) and the holes (horizontal adjustment). This prevents the gate's weight from bearing down on the operator.

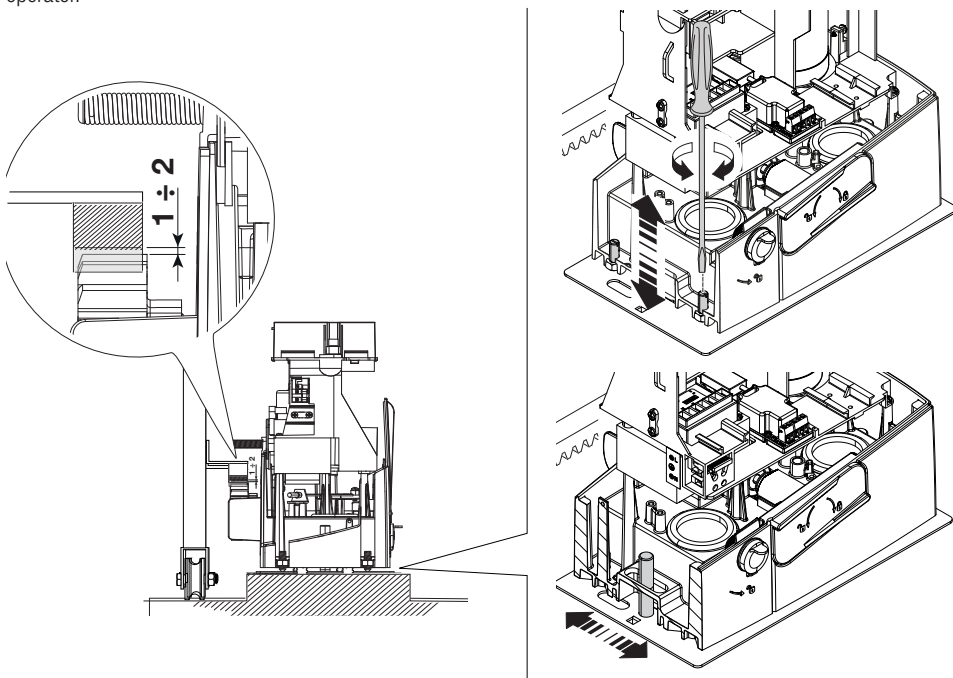

FASTENING THE GEAR MOTOR

Complete the adjusting, fasten the gearmotor to the plate using the washers and nuts.


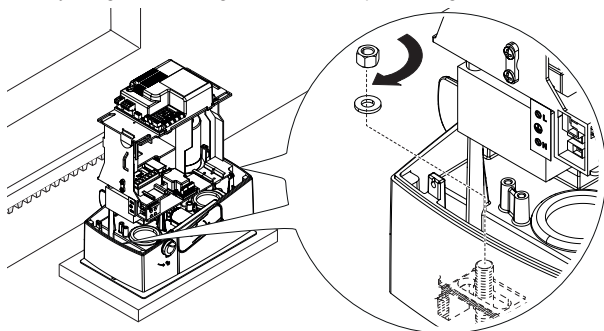


ESTABLISHING THE LIMIT-SWITCH POINTS

Mechanical limit-switches



For opening:

- open the gate **1**;
- fit the opening limit-switch fin onto the rack until the micro switch activates (spring) and fasten it using the grub screws **2 3**.

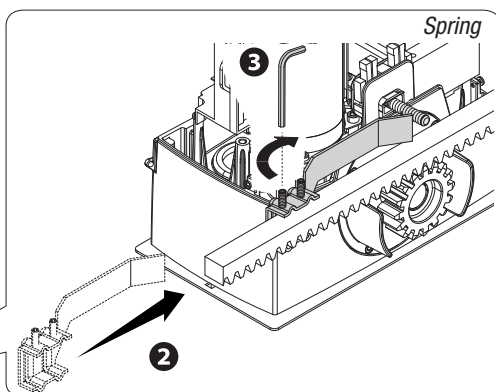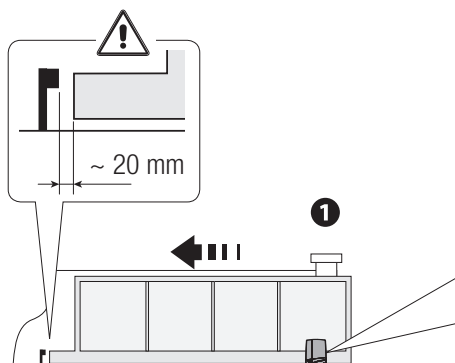

For closing:




- close the gate **4**;
- fit the closing limit-switch fin into the rack until the micro-switch is activated (spring) and fasten it using the grub screws **5 6**.

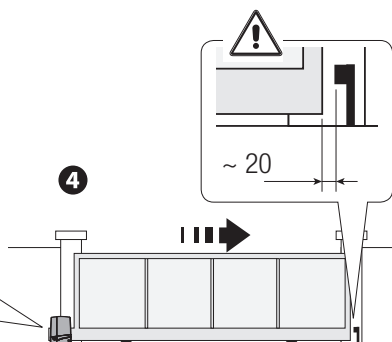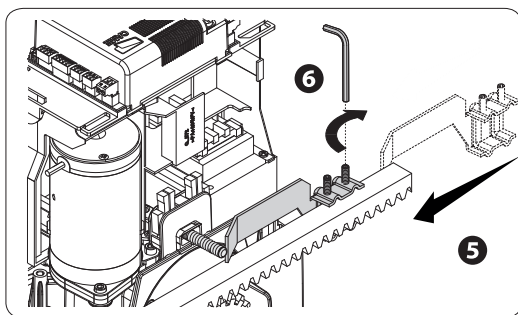

Limit-switch with magnetic sensor (BXV04AGM only)



For opening:

- open the gate; **1**
- switch, magnetic tab onto the rack while keeping the magnet - between 10 and 30 mm, away from the magnetic sensor; **2 3**

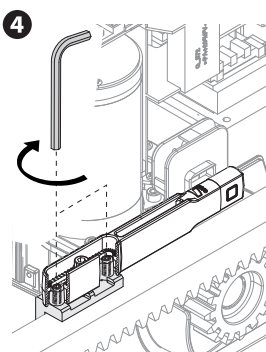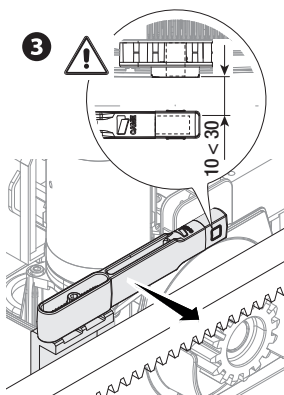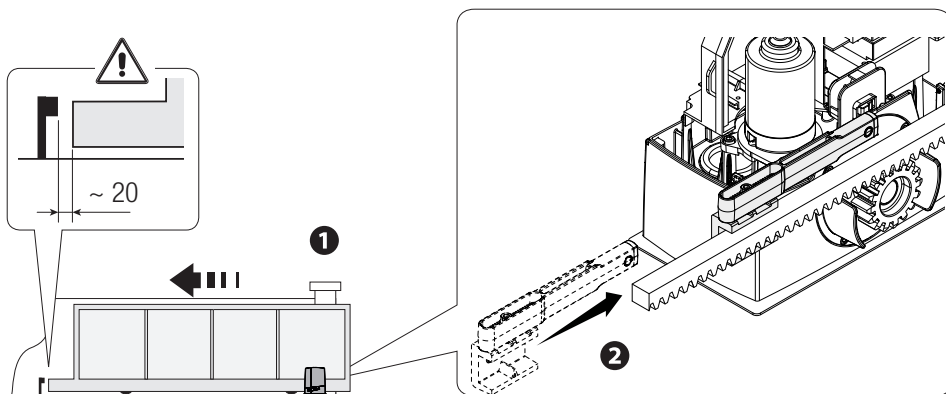



- Fasten the tab brace to the rack by using the headless screws; **4**

- place the tab magnet perpendicularly to the magnetic sensor; **5**
- tighten the screw to fasten the tab. **6**

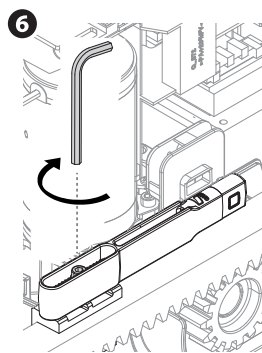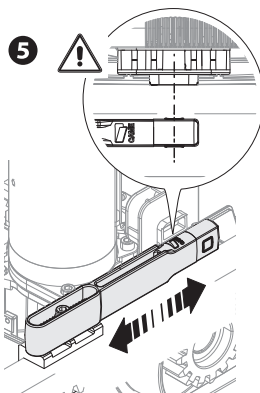


For closing:

- close the gate **1**
- switch, magnetic tab onto the rack while keeping the magnet - between 10 and 30 mm, away from the magnetic sensor; **2 3**

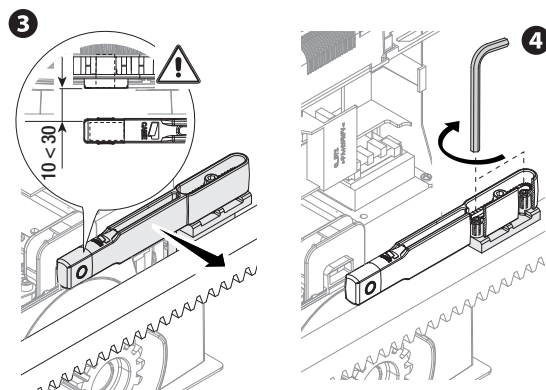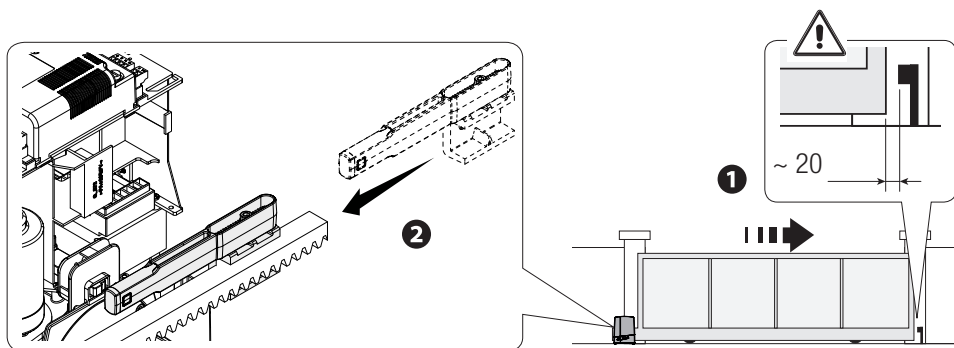

- Fasten the tab brace to the rack by using the headless screws; **4**

- place the tab magnet perpendicularly to the magnetic sensor; **5**
- tighten the screw to fasten the tab. **6**

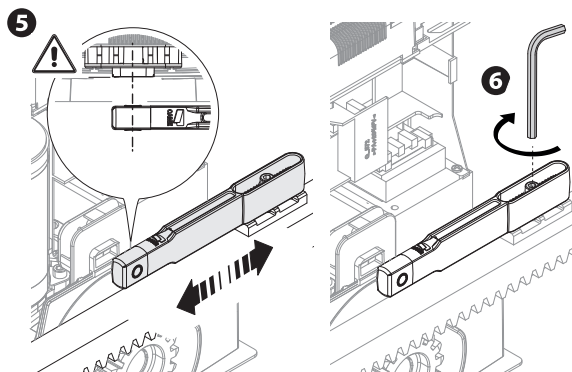

ELECTRICAL CONNECTIONS AND PROGRAMMING

⚠Caution! Before working on the control panel, cut off the mains power supply and remove any batteries.

Power supply to the control board and control devices : 24 V AC/ DC.



Functions on the input and output contacts, time adjustments and user-management settings are set and viewed on the control board's display.

All wiring connections are quick-fuse protected.


| Fuses | ZN7 |
|---------------------------|------------------------------------|
| LINE - Line | 1.6 A-F (230 V) / 3.15 A-F (110 V) |
| ACCESSORIES - Accessories | 2 A-F |

DESCRIPTION OF PARTS


1. Terminal for gearmotors
2. Terminals for encoders
3. Terminals for limit-switches
4. Command and safety devices terminals
5. Antenna terminal
6. AF card slot
7. Memory Roll card connector
8. R700/R800 board connector
9. RSE card slot
10. Connector for the RIOCN8WS card
11. Display
12. Programming buttons
13. Terminals for paired of CRP connection
14. Terminal board for keypad devices
15. Terminal board for transponder selector
16. Connector for the GSM module
17. Terminals for the RGP1 module
18. Terminals for signaling devices
19. Accessories fuse
20. Terminals for powering the control board
21. Line fuse
22. Power supply terminal board

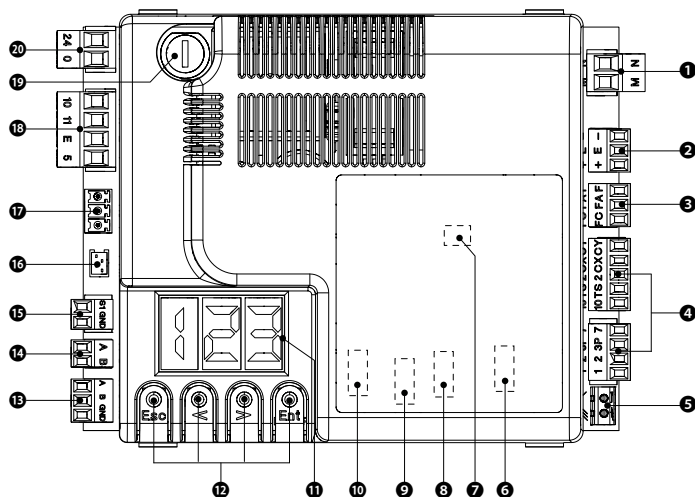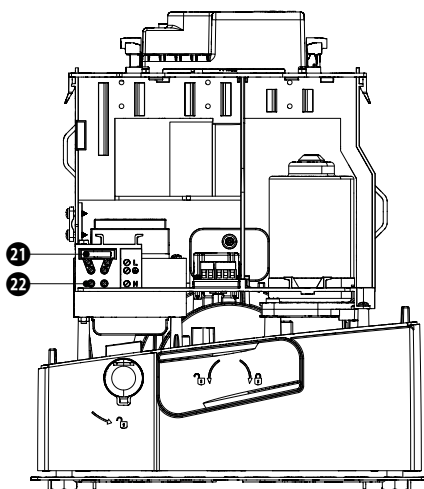


INPUT VOLTAGE

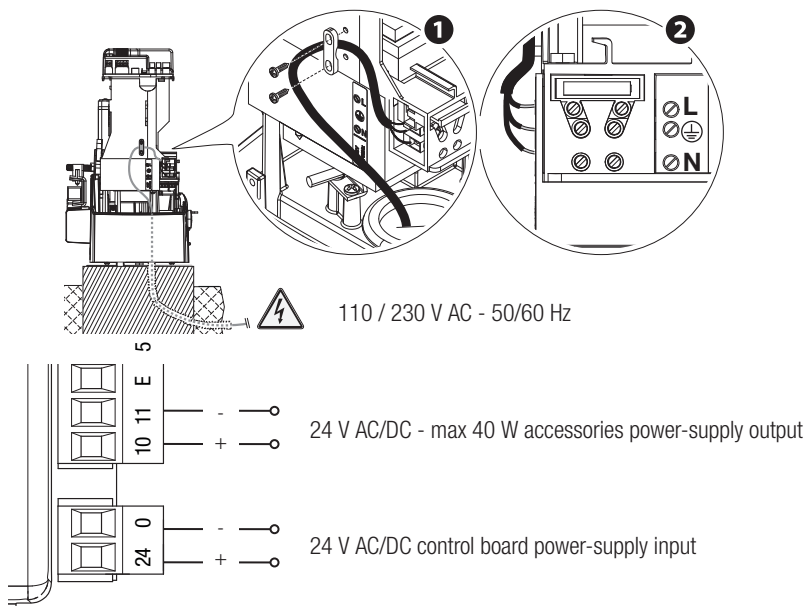

FACTORY WIRING

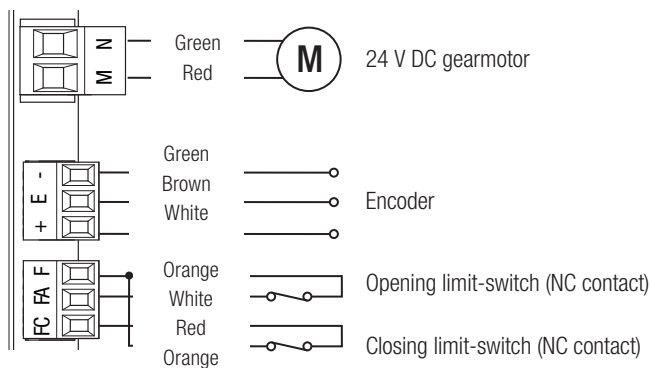


SIGNALING DEVICES

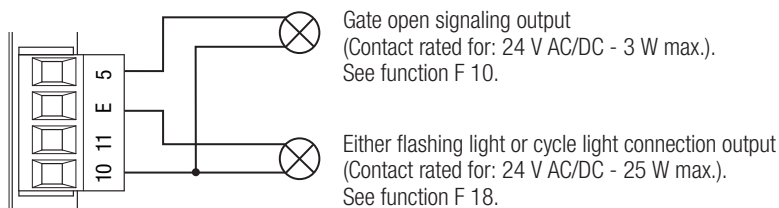


COMMAND AND CONTROL DEVICES

WARNING! For the system to work properly, before fitting any plug-in card, such as the AF or R800 one, you **MUST CUT OFF THE MAINS POWER SUPPLY** and, if present, disconnect any batteries.

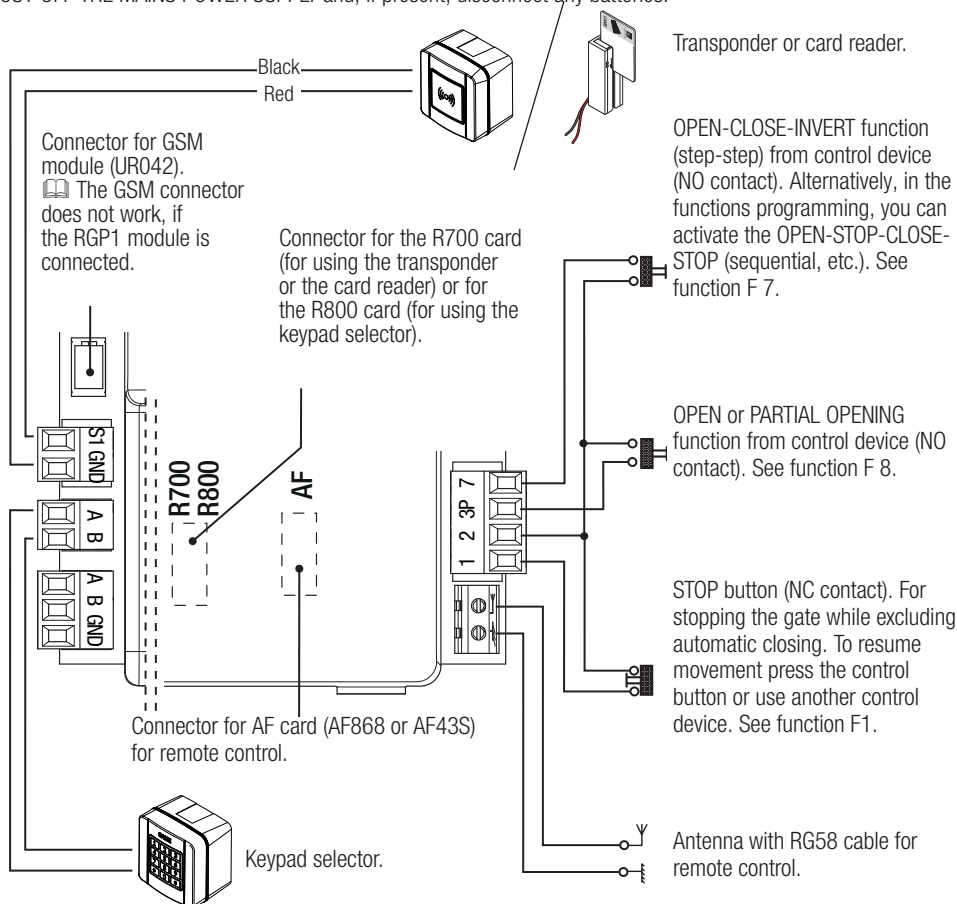

To be able to snap in the cards into the dedicated connectors, remove the card cover.

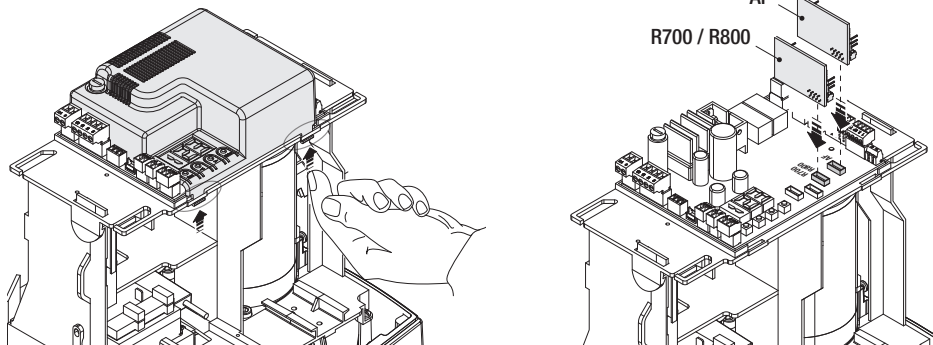

SAFETY DEVICES


Photocells

Configure contact CX or CY (NC), safety input for photocells.

See CX input functions (Function F2) or CY (Function F3) in:

- C1 reopening during closing. When the gate is closing, opening the contact triggers the inversion of movement until the gate is fully open again;
- C2 close back up during opening. When the gate is opening, opening the contact triggers the inversion of movement until the gate is completely closed.
- C3 partial stop. Stopping of the gate, if it is moving, with consequent automatic closing (if the automatic closing function has been entered);
- C4 obstruction wait. Stopping of the gate, if it is moving, which resumes movement once the obstruction is removed.

If contacts CX and CY are not used they should be deactivated during programming.

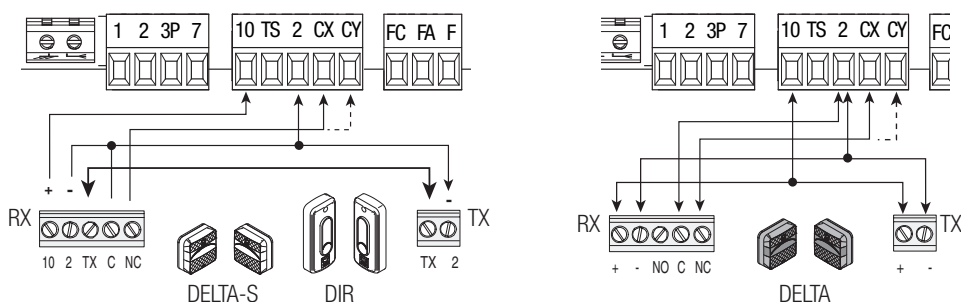


Sensitive Safety Edges

Configure contact CX or CY (NC), safety input for sensitive safety-edges.

See CX input functions (Function F2) or CY (Function F3) in:

- C7 reopening during closing. When the gate is closing, opening the contact triggers the inversion of movement until the gate is fully open again;
- C8 reclosing during opening. When the gate is opening, opening the contact triggers the inversion of movement until the gate is fully closed.

If contacts CX and CY are not used they should be deactivated during programming.

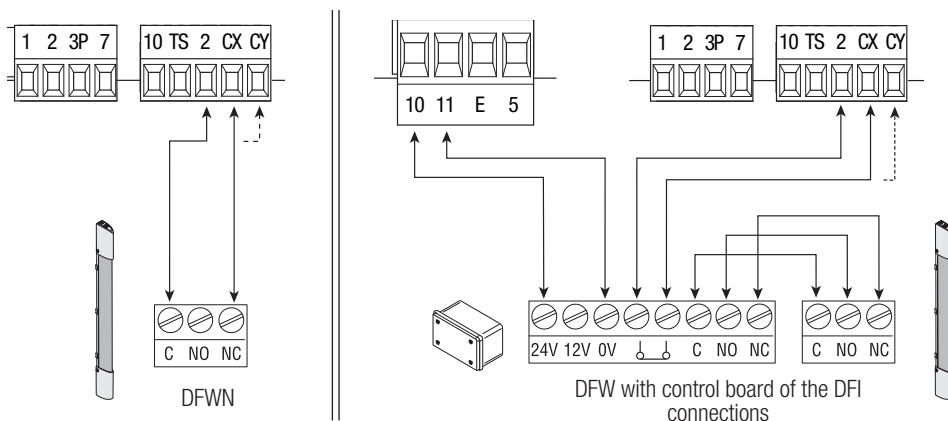


Connecting the safety devices (i.e. the safety test)

At each opening and closing command, the control board checks the efficacy of the safety devices (such as, photocells).

Any malfunction inhibits any command and is signaled on display E4.

Enable function F 5 in programming.

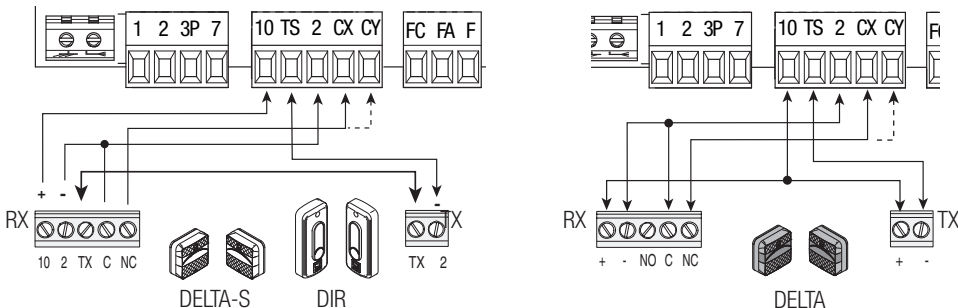

RIO WIRELESS DEVICES

 
Plug the RIOCN8WS card into its corresponding connector on the control board.

Set the function to be associated to the wireless device (F65, F66, F67 e F68).

Configure the RIOED8WS, RIOPH8WS and RIOLX8WS wireless accessories by following the indications shown in the folder enclosed with each accessory.

📖 If the devices are not configured with the RIOCN8WS card, the display will read out E18.

⚠ If there are any radio-frequency disturbances to the system, the wireless system will inhibit the normal operation of the operator, and this error will show up on the display as E17.



RIOED8WS


RIOPH8WS

RIOLX8WS


CONNECTION FOR PAIRED OPERATION AND FOR CRP (CAME REMOTE PROTOCOL)

See the PAIRED CONNECTION WITH SINGLE CONTROL chapter.

Fit the RSE card.

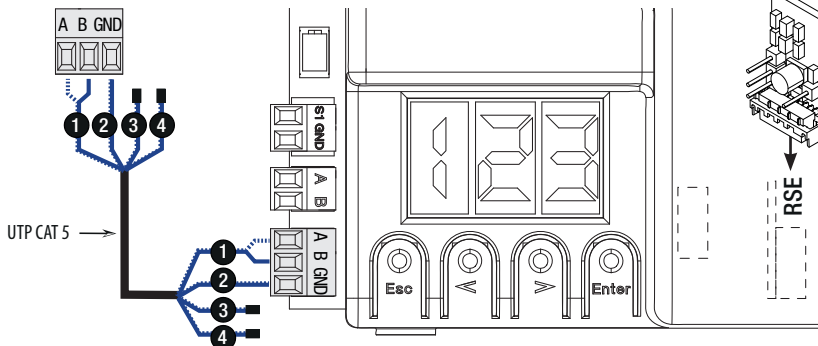

DESCRIPTION OF PROGRAMMING COMMANDS

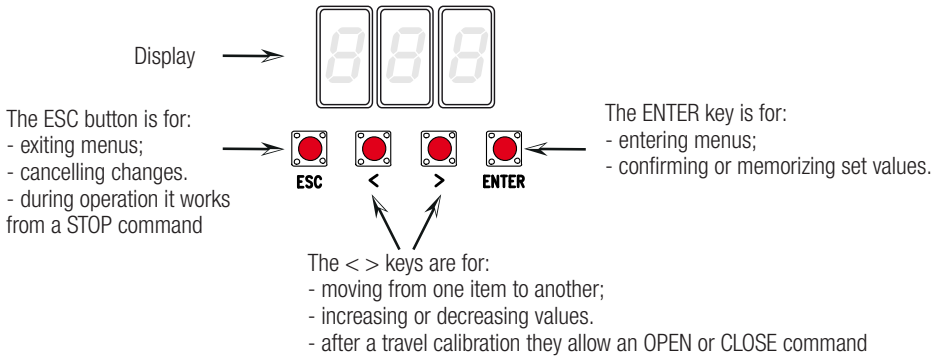

FUNCTIONS MENU



IMPORTANT! Start programming by first performing the following: **MOTOR-TYPE SETTING (A1)**, **OPENING DIRECTION (F54)**, **TOTAL STOP (F1)** and **TRAVEL CALIBRATION (A3)**

Only program functions when the operator is stopped.







You can memorize up to 25 maximum users.

When the menu is active, the system cannot be used.

| | |
|-----------------------------|---|
| F1 Total stop [1-2] | NC input – Gate stop that excludes any automatic closing; to resume movement, use the control device. The safety device is inserted into [1-2]. OFF = Deactivated (default) / ON = Activated |
| F2 Input [2-CX] | NC input – Can associate: C1 = reopening during closing by photocells, C2 = reclosing during opening by photocells, C3 = partial stop, C4 = obstruction wait, C7 = reopening during closing by sensitive safety-edges, C8 = reclosing during opening by sensitive safety-edges. OFF = Deactivated (default) / C1 / C2 / C3 / C4 / C7 / C8 |
| F3 Input [2-CY] | NC input – Can associate: C1 = reopening during closing by photocells, C2 = reclosing during opening by photocells, C3 = partial stop, C4 = obstruction wait, C7 = reopening during closing by sensitive safety-edges, C8 = reclosing during opening by sensitive safety-edges. OFF = Deactivated (default) / C1 / C2 / C3 / C4 / C7 / C8 |
| F5 Safety test | After every opening or closing command, the board will check whether the photocells are working properly. The safety test is always active for wireless devices. 0 = Deactivated (default) / 1 = CX / 2 = CY / 4 = CX + CY |
| F6 Maintained action | The barrier opens and closes by keeping a button pressed. Opening button on contact 2-3 and closing button on contact 2-4. All other control devices, even radio-based ones, are excluded. 0 = Deactivated (default) / 1 = Activated |
| F7 Command [2-7] | From the control device connected to 2-7, it performs the (open-close-invert) step-step, (open-stop-close-stop), sequential, open or close command. 0 = Step-step (default) / 1 = Sequential / 2 = Open / 3 = Close |

| | | |
|-----|--|---|
| F8 | Command [2-3P] | From the control device connected to 2-3P, it performs a partial (1) or total opening (2) of the gate.  The partial opening time is adjusted on function F 71. 1 = partial opening / 2 = Open |
| F9 | Obstruction detection with motor stopped | With the gate closed, opened or totally stopped, the gearmotor stays idle if the safety devices, that is, photocells or sensitive safety-edges detect an obstruction. OFF = Deactivated (default) / ON = Activated |
| F10 | Gate open signaling output | It signals the gate status. The signal device is connected to contact 10-5. 0 = lit when gate is open or moving (default) / 1 = during openings it flashes intermittently each half second, and during closings it flashes intermittently each second. <i>It stays on steadily when the barrier is open, off or when it s closed.</i> |
| F11 | Encoder | Managing slow-downs, obstruction detections and sensitivity. OFF = Deactivated / ON = Activated (default) |
| F12 | Soft Start | With each opening and closing command, the gate starts moving slowly for a few seconds. OFF = Deactivated (default) / ON = Activated |
| F14 | Sensor type selection | Setting the type of accessory for controlling the operator. 0 = command with transponder sensor or magnetic card reader / 1 = command with keypad selector (default). |
| F18 | Additional light | Output on contact 10-E. Flashing light: it flashes during the gate's opening and closing phases. Cycle: outdoor lamp for extra lighting in the driveway. It stays lit from when the gate starts opening to when it closes, including the waiting time prior to automatic closing (only with with TCA activated). 0 = Flashing light (default) / 1 = Cycle |
| F19 | Automatic Closing Time | The automatic-closing wait starts when the opening limit switch point is reached and can be set to between 1 and 180 seconds. The automatic closing does not work if any of the safety devices trigger when an obstruction is detected, or after a total stop, or during a power outage. OFF = Deactivated (default) / 1 = 1 second / ... / 180 = 180 seconds |
| F20 | Automatic closing time after partial opening | The wait before the automatic closing starts after a partial opening command for an adjustable time of between 1 s and 180 s. The automatic closing does not work if any of the safety devices trigger when an obstruction is detected, or after a total stop, or during a power outage.  The F19 function must not be activated. OFF = Deactivated / 1 = 1 seconds / ... / 10 = seconds (default) / ... / 180 = 180 seconds |
| F21 | Pre-flashing time | Adjusting the pre-flashing time for the flashing light connected to 10-E before each maneuver. The flashing time is adjustable from one to ten seconds. OFF = Deactivated (default) / 1 = 1 seconds / ... / 10 = 10 seconds |
| F28 | Gate travel speed | Setting the gate's opening and closing speeds, calculated as a percentage. 60 = Minimum speed / ... / 100 = Maximum speed (default) |
| F30 | Slow-down speed | Setting the gate's opening and closing slow-down speed, calculated as a percentage. 10 = Minimum speed / ... / 50 = Maximum speed (default) |
| F34 | Travel sensitivity | Adjusting obstruction detection sensitivity during gate-leaf travel. 10 = maximum sensitivity / ... / 100 = minimum sensitivity (default) |

| | | |
|-----|--|--|
| F35 | Slow-down sensitivity | Adjusting obstruction detection sensitivity during slow-down. 10 = maximum sensitivity / ... / 100 = minimum sensitivity (default) |
| F36 | Adjusting the partial opening | Adjustment as a percentage of total travel, during gate opening. This function appears only if the Encoder function is activated. 10 = 10% of the gate travel (default) / ... / 80 = 80% of the door travel |
| F37 | Opening slow-down point | Percentage adjustment of the total door travel, of the opening slow-down starting point. This function appears only if the Encoder function is activated. 10 = 10% of the gate-leaf travel / ... / 25 = 25% of the gate-leaf travel (default) / ... / 60 = 60% of the gate-leaf travel |
| F38 | Closing slow-down point | Percentage adjustment of the total door travel, from the closing slow-down starting point. This function appears only if the Encoder function is activated. 10 = 10% of the gate-leaf travel / ... / 25 = 25% of the gate-leaf travel (default) / ... / 60 = 60% of the gate-leaf travel |
| F49 | Managing the serial connection | To enable the paired operating mode or the CRP (Came Remote Protocol). 0 = Deactivated (default) / 1 = Paired / 3 = CRP |
| F50 | Saving data | Saving users and settings saved in the Memory Roll. This function only appears if a Memory Roll has been plugged into the control board. 0 = Deactivated (default) / 1 = Activated |
| F51 | Reading of data | Uploading data saved in the Memory Roll. This function only appears if a Memory Roll has been plugged into the control board. 0 = Deactivated (default) / 1 = Activated |
| F52 | Transferring parameters in paired mode | Uploading settings from Master to Slave. This appears only if function F49 is set to Paired. OFF = Deactivated (default) / ON = Activated |
| F54 | Opening direction | For setting the gate opening direction. OFF = Opening left (default) / ON = Opening right |
| F56 | Peripheral number | To set the peripheral's number from 1 to 255 for each control board when you have a system with several operators. 1 ----> 255 |
| F63 | Changing COM speed | For setting the communication speed used in the CRP (Came Remote Protocol) connection system. 0 = 1200 Baud / 1 = 2400 Baud / 2 = 4800 Baud / 3 = 9600 Baud / 4 = 14400 Baud / 5 = 19200 Baud / 6 = 38400 Baud (default) / 7 = 57600 Baud / 8 = 115200 Baud |
| F65 | Wireless input RIOED8WS [T1] | Wireless safety device (RIOED8WS) associated to a function of choice among those available: P0 = TOTAL STOP, P7 = reopening during closing, P8 = reclosing during opening. For programming, see the instructions that come with the accessory. This function only appears if the RIOCN8WS card is plugged into the control board. OFF = Deactivated (default) / P0 / P7 / P8 |

| | | |
|-----|--|--|
| F66 | Wireless input RIOED8WS [T2] | <p>Wireless safety device (RIOED8WS) associated to a function of choice among those available: P0 = TOTAL STOP, P7 = reopening during closing, P8 = reclosing during opening.</p> <p>For programming, see the instructions that come with the accessory.</p> <p> This function only appears if the RIOCN8WS card is plugged into the control board.</p> <p>OFF = Deactivated (default) / P0 / P7 / P8</p> |
| F67 | Wireless input RIOPH8WS [T1] | <p>RIOPH8WS is associated to any function chosen among those available: P1 = reopening during closing; P2 = reclosing during opening; P3 = partial stop; P4 = obstruction wait.</p> <p>For programming, see the instructions that come with the accessory.</p> <p> This function only appears if the RIOCN8WS card is plugged into the control board.</p> <p>OFF = Deactivated / P1 (default) / P2 marked areas / P3 / P4</p> |
| F68 | Wireless input RIOPH8WS [T2] | <p>RIOPH8WS is associated to any function chosen among those available: P1 = reopening during closing; P2 = reclosing during opening; P3 = partial stop; P4 = obstruction wait.</p> <p>For programming, see the instructions that come with the accessory.</p> <p> This function only appears if the RIOCN8WS card is plugged into the control board.</p> <p>OFF = Deactivated / P1 (default) / P2 marked areas / P3 / P4</p> |
| F71 | Partial opening time | <p>After an opening command from the button connected to 2-3P, the gate opens for an adjustable time of between five seconds and 40 seconds.</p> <p> This function only appears if the Encoder function is deactivated.</p> <p>5 = 5 seconds / ... / 40 = 40 seconds</p> |
| U1 | Entering users | <p>Entering up to 250 users and associating to each one a function of choice among those included. This must be done via transmitter or other control device (see "ENTERING USERS WITH ASSOCIATED COMMAND" paragraph).</p> <p>1 = Step-step command (open-close) / 2 = Sequential command (open-stop-close-stop) / 3 = Open only command / 4 = P artial command</p> |
| U2 | Deleting users | <p>Deleting a single user</p> <p>OFF = Deactivated / ON = Activated</p> |
| U3 | Deleting users | <p>Deleting all users.</p> <p>0 = Deactivated (default) / 1 = Delete</p> |
| U4 | Decoding the radio- frequency code | <p>Select the type of transmitter radio coding that you wish to save on the control board.</p> <p> When you select a radio coding, all saved transmitter are automatically deleted.</p> <p> TWIN's coding lets you save multiple users with the same key (Key block).</p> <p>1 = all series (default) / 2 = only Rolling Code series / 3 = only TWIN series</p> |
| A1 | Motor type | <p>To set the gearmotor depending on the gate's weight.</p> <p>1 = 400 kg / 2 = 600 kg / 3 = 800 kg / 4 = 1000 kg</p> |
| A3 | Gate-swing calibration | <p>Automatic calibration of the gate-leaf swing (see the CALIBRATING SWING paragraph).</p> <p>OFF = Deactivated / ON = Activated</p> |
| A4 | Resetting parameters | <p>Caution! The default settings are restored and the travel calibration deleted.</p> <p>OFF = Deactivated / ON = Activated</p> |
| A5 | Maneuver count | <p>For viewing the number of maneuvers made (001 = 100 maneuvers; 010 = 1,000 maneuvers; 100 = 10,000 maneuvers; 999 = 99,900 maneuvers; CSI = maintenance job).</p> |
| A6 | Adjusting the motor torque | <p>For adjusting the motor torque from 1 (minimum) to 5 (maximum).</p> <p>1 / 2 / 3 / 4 / 5</p> |
| H1 | Version | <p>View the firmware version.</p> |

COMMISSIONING

Once the electrical connections are done, have only skilled, qualified staff commission the operator into service. Before continuing, make sure the area is free of any obstructions, and that there are mechanical, opening and closing gate stops in place.

Power up and begin configuring the system. **Important!** Start programming by first doing the following functions: F54 (opening direction) and F1 (Total Stop). Once the programming is done, verify that the operator and all the accessories are working properly. Use the < > keys to open and close the gate and ESC to stop it.

△ After powering up the system, the first maneuver is always the opening. In this phase, the gate cannot be closed. You will need to wait for the gate to completely open.

△ Immediately press the STOP button if any suspicious malfunctions, noises or vibrations occur in the system.

MANAGING USERS

📖 When adding and deleting users, the flashing numbers appearing are those numbers that are available and usable to assign to a new user (max. 250 users).

📖 Before registering the users, make sure the AF radio card is plugged into the connector (see the paragraph called CONTROL DEVICES).

ENTERING A USER WITH AN ASSOCIATED COMMAND


Select U 1. Press ENTER to confirm.

 
 
Select a command to associate to the user: The commands are:

- **1** = step-step (open-close);
- **2** = - sequential (open-stop-close-stop);
- **3** = only open;
- **4** = partial opening/pedestrian.

Press ENTER to confirm...

... a number between 1 and 250 will start flashing for a few seconds. Send the code from the transmitter or other control device, such as, a keypad selector or a transponder.

 Note down the user entered **into the LIST OF REGISTERED USERS**.






DELETING A SINGLE USER

Select U 2. Press ENTER. Activate the function and press ENTER to confirm


Use the arrow keys select the number of the user you wish to delete.

Press ENTER to confirm...

   ... CLr will appear on the screen to confirm deletion.



GATE-SWING CALIBRATION

 
 
 Before calibrating the gate travel, position the gate half-way, check that the maneuvering area is clear of any obstruction and check that there are mechanical opening and closing stops.

⚠ The mechanical gate-stops are obligatory.



Important! When calibrating, all safety devices will be disabled excluding the one for TOTAL STOP which is active on on the ESC button.

Select A 3. Press ENTER to confirm.

Select 1 and press ENTER to confirm the travel calibration operation.



The gate will perform a closing maneuver until it reaches a final stop...
 ...then the gate will perform an opening maneuver until it reaches a final stop.

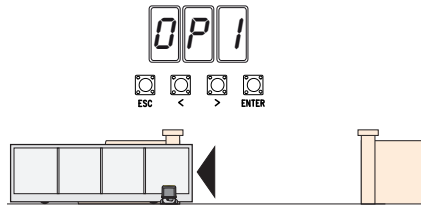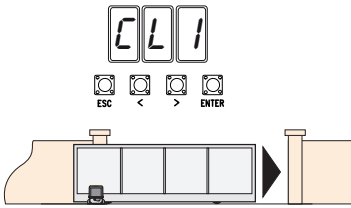


SAVING AND UPLOADING ALL DATA (USERS AND CONFIGURATION) WITH THE MEMORY ROLL

Procedure for memorizing all of the system's user and configuration data by using the Memory Roll, so they can be used with another control board, even on another system.

Caution! Fitting and extracting the Memory Roll must be done with the mains power disconnected.


- 1 Fit the Memory Roll into the its corresponding connector on the control board.
- 2 Select **F50** and press ENTER to confirm the saving of data in the Memory Roll.
- 3 Extract the Memory roll and fit it into the connector of another control board.
- 4 Select **F51** and press ENTER to confirm the uploading of data into the Memory Roll.

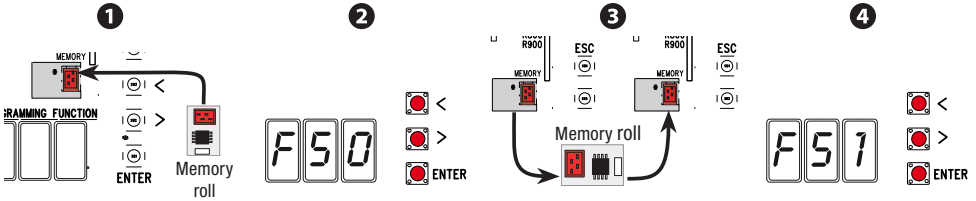

FINAL OPERATIONS

Once the electrical connections are done and the set up is finished, fasten the cables to the gearmotor jumper using a cable tie.

Fit the cover and fasten it to the sides using the screws.

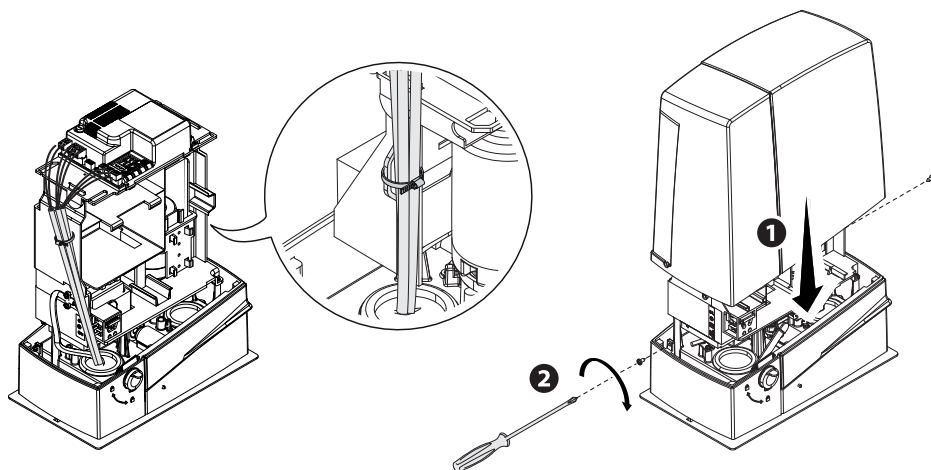

ERROR MESSAGE

 The error messages appear on the display.

| | |
|------|---|
| E 1 | The travel calibration was interrupted when the STOP button was activated |
| E 2 | Gate-leaf travel calibration incomplete |
| E 3 | Encoder broken |
| E 4 | Services test error |
| E 7 | Insufficient operating time |
| E 9 | Closing obstruction |
| E 10 | Opening obstruction |
| E 11 | Maximum number of detected obstructions |
| E 13 | The NC contacts are open (for example, the limit-switches) |
| E 14 | Serial communication error |
| E 17 | Wireless system error |
| E 18 | The wireless system configuration is missing |

PAIRED OPERATION

Electrical wiring

Important! Start by performing the following procedures on both operators:

- plug the RSE card into the connector on the control panel of both operators;
- Connect the two control panels to a CAT 5-type (max. 1,000 m) cable onto terminals A-A / B-B / GND-GND, see the PAIRED OPERATION paragraph;
- connect all of the control and safety devices on the MASTER operator's control panel.

Saving users


Execute the procedure, to add a user with an associated command, on the MASTER panel.

Programming

Start by performing the following settings only on the MASTER control panel:

- select 1 (paired mode) from the F49 function and press ENTER to confirm;
- select the opening direction from the F54 function and press ENTER to confirm;
- select ON from the F52 function and press ENTER to confirm the transferring of the parameters to paired mode.


Proceed with the next settings and adjustments only on the MASTER control panel.

 The programming keys on the SLAVE control panel are disabled.

Operating modes

- 1 Either STEP-STEP or ONLY OPEN command. Both leaves open.
- 2 PARTIAL/PEDESTRIAN OPENING command. Only the MASTER operator's leaf opens.

For the types of command that can be selected and paired to users, see the ENTERING USERS WITH ASSOCIATED COMMANDS.

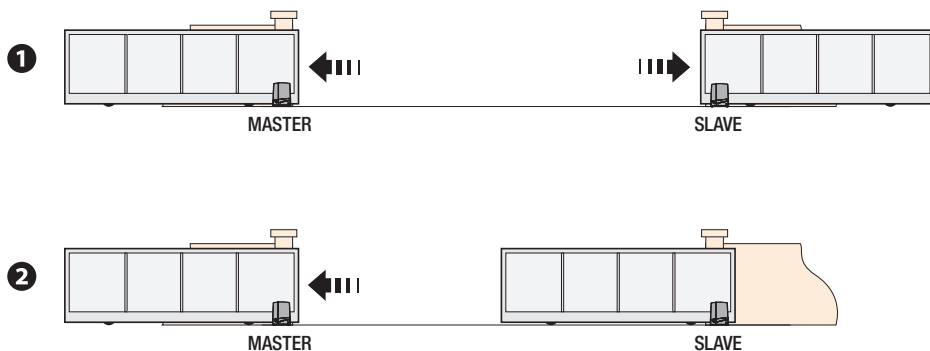

WHAT TO DO IF ...

| ISSUES | POSSIBLE CAUSES | POSSIBLE FIXES |
|-----------------------------------|---|---|
| It neither opens nor closes | <ul style="list-style-type: none"> • Power supply is missing • The gear motor is stuck • The transmitter emits a weak signal or no signal • Control buttons or selectors stuck • The wireless accessory does not communicate | <ul style="list-style-type: none"> • Check main power supply • Lock the gearmotor • Replace the batteries • Check integrity of devices and/or of electrical cables • Call for assistance |
| The gate opens but does not close | <ul style="list-style-type: none"> • The photocells are working | <ul style="list-style-type: none"> • Check that there are no obstructions in the photocells' area of operation |

⚠ If the problem cannot be solved by following the fixes in the table or if any malfunctions, anomalies, noises, vibrations or suspicious and unexpected behavior is experienced on the system, call for qualified assistance.

DISMANTLING AND DISPOSAL

📄 CAME S.p.A. applies a certified Environmental Management System at its premises, which is compliant with the UNI EN ISO 14001 standard to ensure the environment is safeguarded.

Please continue safeguarding the environment. At CAME we consider it one of the fundamentals of our operating and market strategies. Simply follow these brief disposal guidelines:

♻ DISPOSING OF THE PACKAGING

The packaging materials (cardboard, plastic, and so on) should be disposed of as solid household waste, and simply separated from other waste for recycling.

Always make sure you comply with local laws before dismantling and disposing of the product.

DISPOSE OF RESPONSIBLY!

♻ DISMANTLING AND DISPOSAL

Our products are made of various materials. Most of these (aluminum, plastic, iron, electrical cables) are classified as solid household waste. They can be recycled by separating them before dumping at authorized city plants.

Whereas other components (control boards, batteries, transmitters, and so on) may contain hazardous pollutants.

These must therefore be disposed of by authorized, certified professional services.

Before disposing, it is always advisable to check with the specific laws that apply in your area.

DISPOSE OF RESPONSIBLY!

LIST OF REGISTERED USERS

| | | | | | |
|----|--|----|--|----|--|
| 1 | | 32 | | 63 | |
| 2 | | 33 | | 64 | |
| 3 | | 34 | | 65 | |
| 4 | | 35 | | 66 | |
| 5 | | 36 | | 67 | |
| 6 | | 37 | | 68 | |
| 7 | | 38 | | 69 | |
| 8 | | 39 | | 70 | |
| 9 | | 40 | | 71 | |
| 10 | | 41 | | 72 | |
| 11 | | 42 | | 73 | |
| 12 | | 43 | | 74 | |
| 13 | | 44 | | 75 | |
| 14 | | 45 | | 76 | |
| 15 | | 46 | | 77 | |
| 16 | | 47 | | 78 | |
| 17 | | 48 | | 79 | |
| 18 | | 49 | | 80 | |
| 19 | | 50 | | 81 | |
| 20 | | 51 | | 82 | |
| 21 | | 52 | | 83 | |
| 22 | | 53 | | 84 | |
| 23 | | 54 | | 85 | |
| 24 | | 55 | | 86 | |
| 25 | | 56 | | 87 | |
| 26 | | 57 | | 88 | |
| 27 | | 58 | | 89 | |
| 28 | | 59 | | 90 | |
| 29 | | 60 | | 91 | |
| 30 | | 61 | | 92 | |
| 31 | | 62 | | 93 | |

| | |
|-----|--|
| 94 | |
| 95 | |
| 96 | |
| 97 | |
| 98 | |
| 99 | |
| 100 | |
| 101 | |
| 102 | |
| 103 | |
| 104 | |
| 105 | |
| 106 | |
| 107 | |
| 108 | |
| 109 | |
| 110 | |
| 111 | |
| 112 | |
| 113 | |
| 114 | |
| 115 | |
| 116 | |
| 117 | |
| 118 | |
| 119 | |
| 120 | |
| 121 | |
| 122 | |
| 123 | |
| 124 | |
| 125 | |

| | |
|-----|--|
| 126 | |
| 127 | |
| 128 | |
| 129 | |
| 130 | |
| 131 | |
| 132 | |
| 133 | |
| 134 | |
| 135 | |
| 136 | |
| 137 | |
| 138 | |
| 139 | |
| 140 | |
| 141 | |
| 142 | |
| 143 | |
| 144 | |
| 145 | |
| 146 | |
| 147 | |
| 148 | |
| 149 | |
| 150 | |
| 151 | |
| 152 | |
| 153 | |
| 154 | |
| 155 | |
| 156 | |
| 157 | |

| | |
|-----|--|
| 158 | |
| 159 | |
| 160 | |
| 161 | |
| 162 | |
| 163 | |
| 164 | |
| 165 | |
| 166 | |
| 167 | |
| 168 | |
| 169 | |
| 170 | |
| 171 | |
| 172 | |
| 173 | |
| 174 | |
| 175 | |
| 176 | |
| 177 | |
| 178 | |
| 179 | |
| 180 | |
| 181 | |
| 182 | |
| 183 | |
| 184 | |
| 185 | |
| 186 | |
| 187 | |
| 188 | |
| 189 | |

| | |
|-----|--|
| 190 | |
| 191 | |
| 192 | |
| 193 | |
| 194 | |
| 195 | |
| 196 | |
| 197 | |
| 198 | |
| 199 | |
| 200 | |
| 201 | |
| 202 | |
| 203 | |
| 204 | |
| 205 | |
| 206 | |
| 207 | |
| 208 | |
| 209 | |
| 210 | |
| 211 | |
| 212 | |
| 213 | |
| 214 | |
| 215 | |
| 216 | |
| 217 | |
| 218 | |
| 219 | |
| 220 | |
| 221 | |

| | |
|-----|--|
| 222 | |
| 223 | |
| 224 | |
| 225 | |
| 226 | |
| 227 | |
| 228 | |
| 229 | |
| 230 | |
| 231 | |
| 232 | |
| 233 | |
| 234 | |
| 235 | |
| 236 | |
| 237 | |
| 238 | |
| 239 | |
| 240 | |
| 241 | |
| 242 | |
| 243 | |
| 244 | |
| 245 | |
| 246 | |
| 247 | |
| 248 | |
| 249 | |
| 250 | |

Fabricante / Manufacturer / Hersteller / Fabricant / Fabricante / Fabricante
/ Wytwórca / Fabrikant

Came S.p.a.

Indirizzo / address / adresse / dirección / enderego / adres / adres

Via Martiri della Libertà 15 - 31030 Dosson di Casier, Treviso - Italy



DICHIARA CHE LE AUTOMAZIONI PER CANCELLI SCORREVOLI / DECLARES THAT THE DRIVES FOR SLIDING GATES /
ERKLÄRT DASS DIE AUTOMATISIERUNGEN FÜR SCHIEBETÖRE / DÉCLARE QUE LES AUTOMATISATIONS POUR
PORTAILS COULISSANTS / DECLARA QUE LAS AUTOMATIZACIONES PARA PUERTAS CORREDERAS / DECLARA QUE AS
AUTOMATIZAÇÕES PARA PORTÕES DE CORRER / OŚWADCZA ŻE AUTOMATYKA DO BRAM PRZESUWNYCH /
VERKLAART DAT DE AUTOMATISERING VOOR SCHUIFHEKKEN

BXV04AGS ; BXV06AGS

BXV08AGS ; BXV10AGS

BXV04RGS ; BXV06RGS

BXV08RGS ; BXV10RGS

BXV04AGM

SONO CONFORMI ALLE DISPOSIZIONI DELLE SEGUENTI DIRETTIVE / THEY COMPLY WITH THE PROVISIONS OF THE FOLLOW-
ING DIRECTIVES / DEN VORGABEN DER FOLGENDEN RICHTLINIEN ENTSPRECHEN / SONT CONFORMES AUX DISPOSITIONS
DES DIRECTIVES SUIVANTES / CUMPLEN CON LAS DISPOSICIONES DE LAS SIGUIENTES DIRECTIVAS / ESTÃO DE ACORDO
COM AS DISPOSIÇÕES DAS SEGUINTE DIRECTIVAS / SA ZGODNE Z POSTANOWIENIAMI NASTĘPUJĄCYCH DYREKTYW
EUROPEJSKICH / VOLDOEN AAN DE VOORSCHRIFTEN VAN DE VOLGENDE RICHTLIJNEN:

- COMPATIBILITÀ / COMPATIBILITÉ / ELECTROMAGNETIC COMPATIBILITY / ELEKTROMAGNETISCHE
VERTRÄGLICHKEIT / COMPATIBILITÉ ELECTROMAGNETIQUE / COMPATIBILIDAD ELECTROMAGNETICA / COMPATIBILI-
DADE ELECTROMAGNÉTICA / KOMPATIBILNOŚCI ELEKTROMAGNETYCZNEJ / ELEKTROMAGNETISCHE COMPATIBI-
LITEIT : 2014/30/UE.

Riferimento norme armonizzate ed altre norme tecniche / Refer to
European regulations and other technical regulations / Harmonisierte
Bezugsnormen und andere technische Vorgaben / Référence aux normes
harmonisées et aux autres normes techniques / Referencia normas
armonizadas y otras normas técnicas / Referência de normas harmoniza-
das e outras normas técnicas / Odnosno normy ujednoliczone i inne normy
techniczne / Gaharmoniseerde en andere technische normen waarnaar is
verwezen

EN 61000-6-2:2005

EN 61000-6-3:2007+A1:2011

EN 62233:2008

EN 60335-2-10:2012+A11:2014

EN 60335-2-103:2015

RISPETTANO I REQUISITI ESSENZIALI APPLICATI / MEET THE APPLICABLE ESSENTIAL REQUIREMENTS / DEN WESSENTLIJCHEN
ANGEWANDTEN ANFORDERUNGEN ENTSPRECHEN / RESPECTENT LES CONDITIONS REQUISES NECESSAIRES APPLIQUEES:
/ CUMPLEN CON LOS REQUISITOS ESSENCIALES APLICADOS / RESPETAM O REQUISITOS ESSENCIALES APLICADOS:
/ SPŁYNIAJA PODSTAWOWE WYMAGANIA WYRUNKI: / VOLDOEN AAN DE TOEGEPASTE MINIMUM EISEN:

1.1.3; 1.1.5; 1.2.1; 1.2.2; 1.3.2; 1.3.7; 1.3.8.1; 1.4.1; 1.4.2; 1.5.1; 1.5.6; 1.5.8; 1.5.9; 1.5.13; 1.6.1; 1.6.3; 1.6.4;
1.7.1; 1.7.2; 1.7.4

PERSONA AUTORIZATA A COSTITUIRE LA DOCUMENTAZIONE TECNICA PERTINENTE / PERSON AUTHORISED TO COMPILE THE RELEVANT TECHNICAL DOCUMENTATION /
PERSONE DIE BEVOULMÄCHTIGT IST, DIE RELEVANTEN TECHNISCHEN UNTERLAGEN ZUSAMMENZUSTELLEN / DOCUMENTATION TECHNIQUE SPECIFIQUE D'AUTORISATION
A CONSTITUER / PERSONA FACULIADA PARA ELABORAR LA DOCUMENTACION TECNICA PERTINENTE / PESSOA AUTORIZADA A CONSTITUIR A DOCUMENTAÇÃO TÉCNICA
PERTINENTE / OSOBA UPOWIĄZNIOWANA DO ZREDAGOWANIA DOKUMENTACJI TECHNICZNEJ / DEGENE DIE GEMACHTIGD IS DE RELEVANTE TECHNISCHE DOCUMENTEN
SAMEN TE STELLEN.

CAME S.p.a.

La documentazione tecnica pertinente è stata compilata in conformità all'allegato VII B. / The pertinent technical documentation has been drawn up in compliance with attached
document VII B. / Die relevante technische Dokumentation wurde entsprechend der Anlage VII B ausgestellt. / La documentation technique spécifique a été remplie conformément à
l'annexe II B. / La documentación técnica pertinente ha sido redactada en cumplimiento con el anexo VII B. / A documentação técnica pertinente foi preenchida de acordo com o anexo
VII B. / Os dados da documentação técnica foram redigidos de acordo com o anexo VII B. / Die technische documentatie werdte opgesteld in overeenstemming met de bijlage VII B.

CAME S.p.a. si impegna a trasmettere, in risposta a una richiesta adeguatamente motivata delle autorità nazionali, informazioni pertinenti sulle quasi macchine, e / Came S.p.a., following
a duly motivated request from the national authorities, undertakes to provide information related to the quasi machines, and / Die Firma Came S.p.a. verpflichtet sich auf eine angemessen
motivierten Anfrage der staatlichen Behörden Informationen über die unvollständigen Maschinen, zu übermitteln, und / Came S.p.a. s'engage à transmettre, en réponse à une demande
bien fondée de la part des autorités nationales, les renseignements relatifs aux quasi machines / Came S.p.a. se compromete a transmitir, em resposta a uma solicitação adequadamente
fundada por parte de las autoridades nacionales, informaciones relacionadas con las cuasimáquinas / Came S.p.a. compromete-se em transmitir, em resposta a uma solicitação motivada
apropriadamente pelas autoridades nacionais, informações pertinentes às partes que compoem máquinas / Came S.p.a. zobowiązuje się do udzielenia informacji dotyczących maszyn
nieukończonych na odpowiednio umotywowaną prośbę, złożoną przez kompetentne organy państwowe / Came S.p.a. verbindt zich ertoe om op met redenen omkleed verzoek van de
nationale autoriteiten de relevante informatie voor de niet voltooidde machine te verstrekken.

VIETA / FORBIDS / VERBIETET / INTERDIT / PROHIBE / PROIBE / ZABRANIA SIE / VERBODT

la messa in servizio finché la macchina finale in cui deve essere incorporata non è stata dichiarata conforme, se del caso alla 2006/42/CE / commissioning of the above mentioned until such
moment when the final machine into which they must be incorporated, has been declared compliant, if pertinent, to 2006/42/CE / la mise en service tant que la machine finale dans laquelle elle doit
être incorporée n'a pas été déclarée conforme, le cas échéant, à la norme 2006/42/CE. / la puesta en servicio hasta que la máquina final en la que será incorporada no haya sido declarada
de conformidad de acuerdo a la 2006/42/CE / a colocação em funcionamento, até que a máquina final, onde devem ser incorporadas, não for declarada em conformidade, se de acordo
com a 2006/42/CE. / Uruchomienie urządzenia do czasu, kiedy maszyna, do której ma być wbudowany, nie zostanie oznaczona jako zgodna z wymogami dyrektywy 2006/42/WE, jest taka
procedura była konieczna, / deze in werking te stellen zolang de eindmachine waarin de niet voltooidde machine moet worden ingebouwd in overeenstemming is verklaard, indien toepasselijk;
met de richtlijn 2006/42/EG.

Dosson di Casier (TV)
5 Marzo / March / März / Mars / Marzo
/ Março / Marzec / Maart 2018

Legale Rappresentante / Legal Representative / Gesetzlicher
Vertreter / Representant Legal / Representante Legal /
Representante Legal / Prawny Przedstawiciel / Juridische
Vertegenwoordiger

Paolo Maruzzo

Fascicolo tecnico a supporto / Supporting technical dossier / Unterstützung technische Dossier / soutien dossier technique / apoyo expediente
técnico / apoiar dossier técnico / wspieranie dokumentacji technicznej / ondersteunende technische dossier: 801MS-0150

Came S.p.a.

Via Martiri della Libertà, 15 - 31030 Dosson di Casier - Treviso - Italy - Tel. (+39) 0422 4940 - Fax (+39) 0422 4941
info@came.it - www.came.com

Cap. Soc. 1.610.000,00 € - C.F. e P.I. 03481280265 - VAT IT 03481280265 - REA TV 275359 - Reg. Imp. TV 03461280265

The contents of this manual may change, at any time, and without notice.



CAME.COM

CAME S.P.A.

Via Martiri Della Libertà, 15
31030 Dosson di Casier - Treviso - Italy
tel. (+39) 0422 4940 - fax. (+39) 0422 4941